



AX1839

Radiator Guards Hard Enduro TM Racing EN250i / EN300i 4T

Assembling instructions

What's in the box ?

- 8 NE01-01-001 - TBHC 6x16mm screws
- 4 NE01-01-008 - TBHC 6x25mm screws
- 6 NE01-04-002 - Clamped bolts
- 8 NE01-01-009 - TBHC 6x20mm screws
- 8 NE01-03-001 - M6 washers
- 2 NE03-02-014 - 122mm black spacers
- 2 NE03-02-030 - 80mm spacers
- 1 PM01-07-054 - Left HDPE grid
- 1 PM01-07-055 - Right HDPE grid



The paper instructions may be limited, scan the QR code to watch the tutorial video online.




Approximate time of assembly: 30 minutes.


Hard Enduro Radiator Guards are made to protect the vital components of your bike and does not have a « life warranty ». However, production default may happen and we cover it during the first year of use. In case of premature breakage, please write to contact@axpracing.com

Off-road riding involves significant stresses and risks of impact on the motorcycle and its components. AXP Racing products are designed to improve protection and durability; however, they cannot be considered a foolproof guarantee against damage. AXP Racing accepts no liability for damage resulting from use, impact, or misuse.

Note: you can use Loctite 243 on the screws to keep the spacers in place.

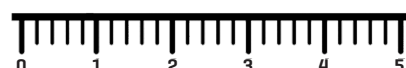


Follow the steps !

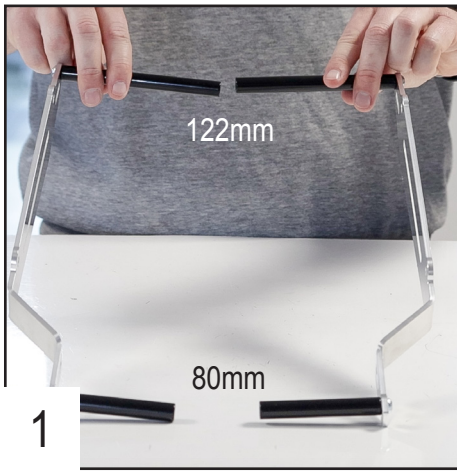



Place the spacers on the small alu parts using 4 TBHC 6x16mm screws.

Fixez les entretoises sur les petits supports en alu en utilisant 4 vis.

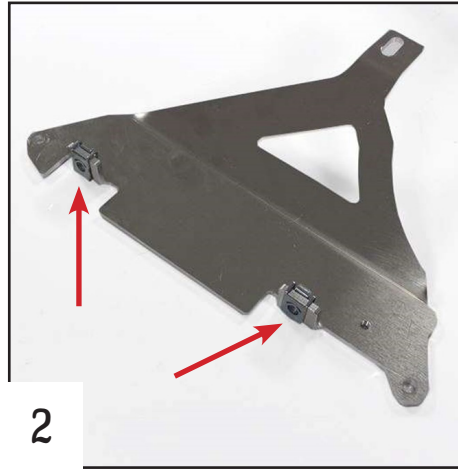


Place 2 clamped bolts on each alu part.

Placez 2 écrou-pinces sur chaque partie en alu.

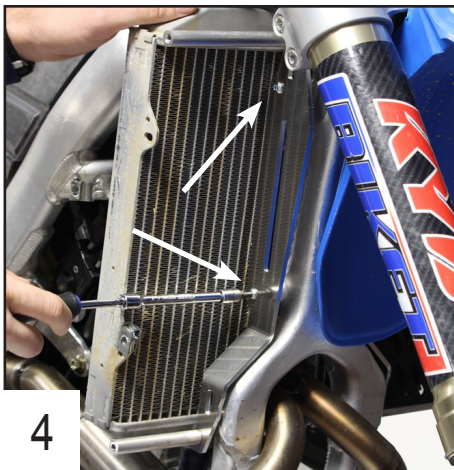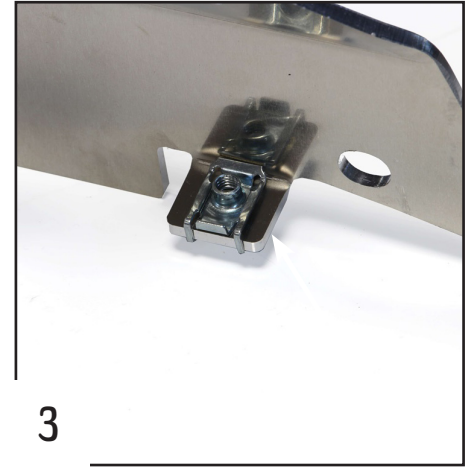


Remove the side plastics and the OEM screws. Then place the guard in front of the radiator using 2 6x25mm screws.

Retirez les plastiques latéraux et les 2 vis d'origine. Puis placez la protection devant le radiateur en utilisant 2 vis.

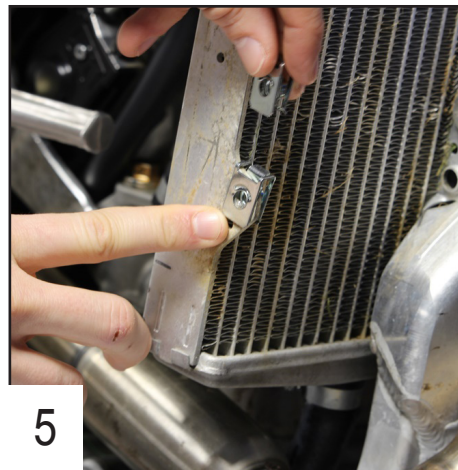


Place a clamped bolt on the radiator's side.

Placez un écrou pince sur le côté du radiateur.

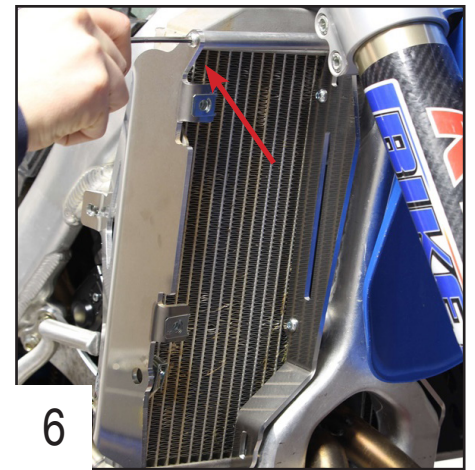



Place the big alu part on the outside of the radiator and maintain it with a 6x16mm screw.

Placez le grand bloc en alu sur l'extérieur du radiateur avec une vis.

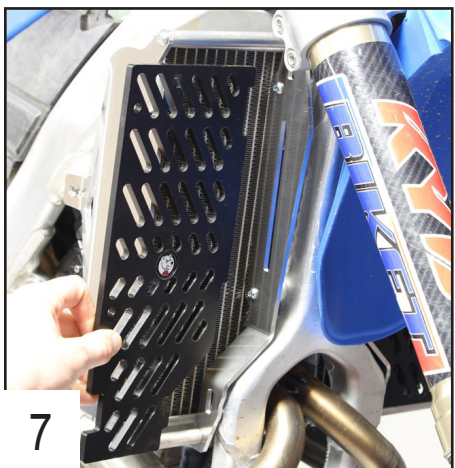

Clip the front HDPE plate and use 2 TBHC 6x20mm screws + M6 washers to keep it in place.

Clipsez la plaque en PEHD à l'avant et fixez là en utilisant 2 vis + rondelles.

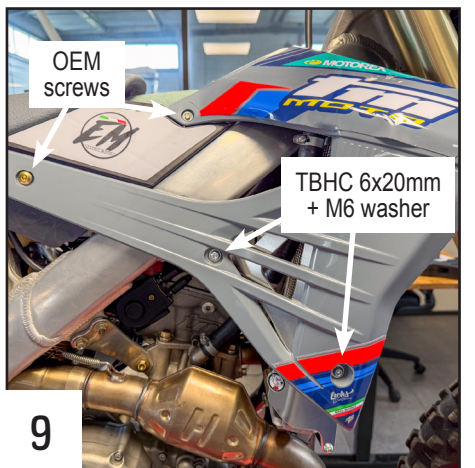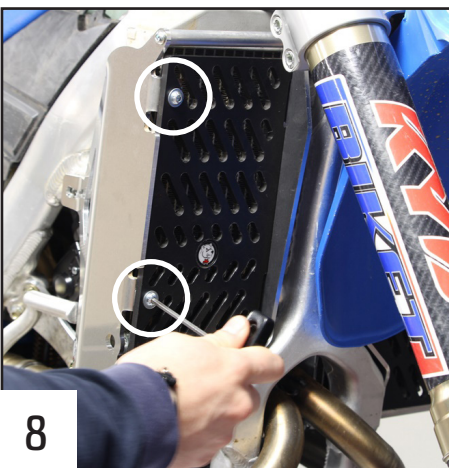

Put the side plastic back in place and repeat the operation on the other side.

Remettez le plastique latéral et répétez l'opération de l'autre côté.