



# AX1835

## Hard Enduro Radiator Guards TM Racing EN250i / EN300i 2T

# Assembling instructions

### What's in the box ?

- 1 PM01-07-052 - Right radiator grid
- 1 PM01-07-053 - Left radiator grid
- 3 NE03-02-014 - Black spacer 122mm
- 1 NE03-02-016 - Black spacer 107mm
- 8 NE01-01-001 - TBHC 6x16mm screws
- 8 NE01-01-009 - TBHC 6x20mm screws
- 4 NE01-01-008 - TBHC 6x25mm screws
- 6 NE01-04-002 - Clamped bolts
- 8 NE01-03-001 - M6 washers

The paper instructions may be limited, a tutorial video is available online to help you.

Scannez le QR code pour regarder la vidéo de montage.



---

Approximate time of assembly: 15 minutes.

Radiator guards are made to protect the vital components of your bike and do not have a « life warranty ». However, production default may happen and we cover them during the first year of use.

In case of premature breakage, please write to [contact@axpracing.com](mailto:contact@axpracing.com)

Off-road riding involves significant stresses and risks of impact on the motorcycle and its components. AXP Racing products are designed to improve protection and durability; however, they cannot be considered a foolproof guarantee against damage. AXP Racing accepts no liability for damage resulting from use, impact, or misuse.

**Note:** you can use Loctite 243 on the screws to keep the spacers in place.


## Follow the steps !



1

Attach two 122mm spacers on the small aluminum part using TBHC 6x16mm screws and tighten.


Fixez les entretoises de 122mm sur les petits côtés en utilisant 2 vis et serrez.

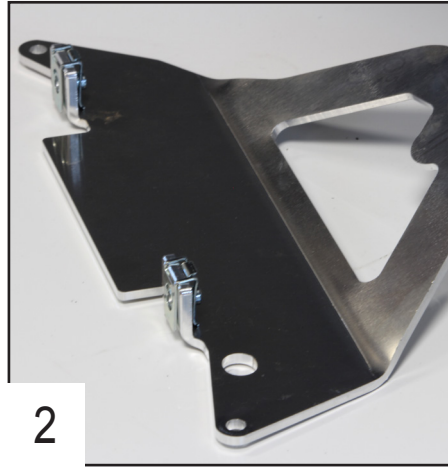


2

Place 3 clamped bolts on each side of the radiator guards.

Placez 3 écrous pinces sur chaque protection.

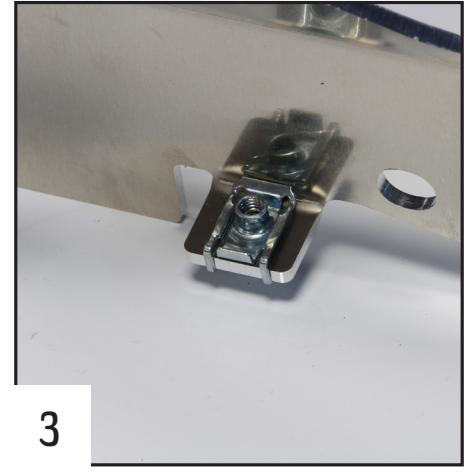


3

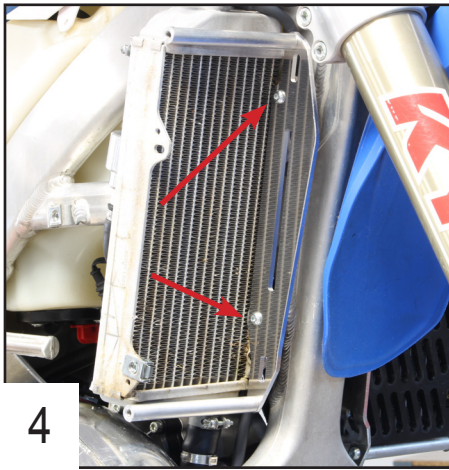

4

Remove the OEM screws and place the guards in front of the radiator using 2 TBHC 6x25mm screws.


Retirez les vis d'origine et placez la protection devant le radiateur avec 2 vis.

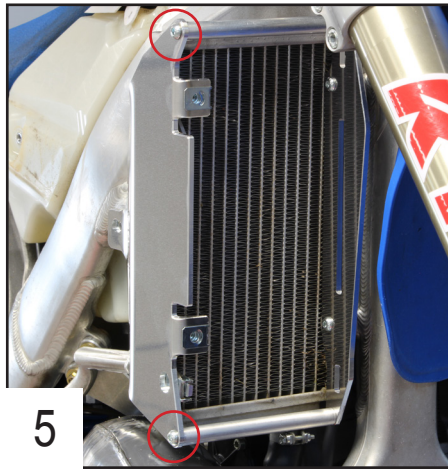

5

Place the guard on the outside of the radiator using 2 TBHC 6x16mm screws.


Placez la protection sur le côté du radiateur en utilisant 2 vis TBHC.

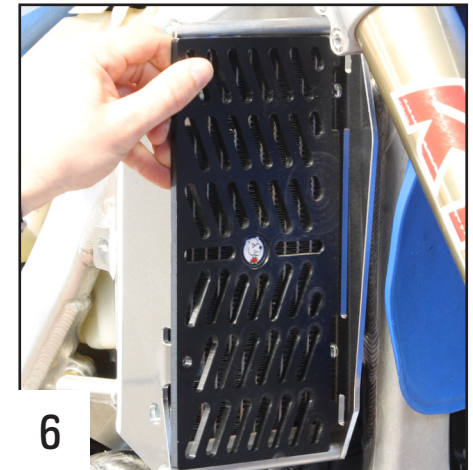

6

Clip the front HDPE plate in the structure.


Clipsez la plaquette en PEHD dans la structure.

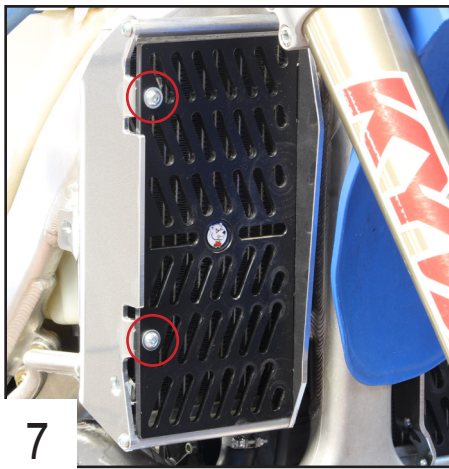

7

Use 2 TBHC 6x20mm screws + washers to keep it in place and tighten.


Utilisez 2 vis + rondelles pour fixer la plaquette.

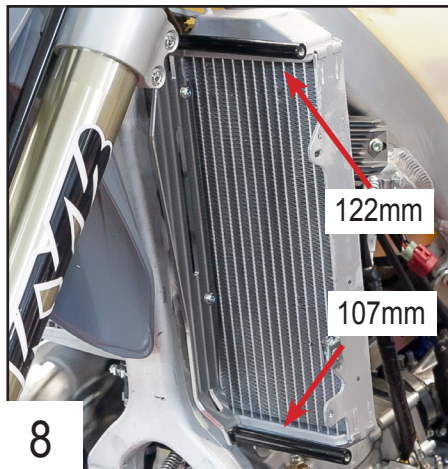

8

Repeat the operation on the other side. Use a 122mm spacer on top and a 107mm spacer at the bottom.

Répétez l'opération de l'autre côté en utilisant une entretoise de 122mm en haut et 107mm en bas.

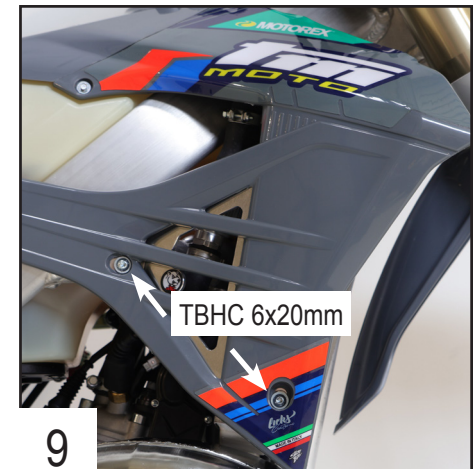

9

Put the plastics back in place using the OEM screws on top and 2 TBHC 6x20mm + M6 washers in the other holes.

Remettez les plastiques en place en utilisant les vis d'origine en haut et 2 TBHC pour les fixations du bas.

## You're all ready to ride !