

Item number: **KFT.06.799.30002/B**Revision: **00** • Date: **05 - 2025****PRO side carrier** ~ 0.75 h.EASY     DIFFICULT

**ENGLISH** Thank you for choosing this premium product from SW-MOTECH. Visit our online shop for more information (e.g. model assignments). Required documents (e.g. national type approval) are available there for you to download.

Please read and understand all the instructions, safety information and warnings in these mounting instructions before mounting and using the product in order to avoid injury and damage. Keep these mounting instructions for reference.

This product was developed for vehicles in factory condition. Compatibility with original accessories or accessories from other manufacturers cannot be guaranteed.

These mounting instructions have been prepared to the best of our current knowledge. No legal claims relating to accuracy can be made. Errors and omissions excepted. We reserve the right to make technical and design changes. The copyright is held by SW-MOTECH.

**SAFETY WARNING SYMBOL**

 This warning symbol is used in these mounting instructions to warn of deadly dangers, injuries or other hazards. The words **DANGER**, **WARNING** or **CAUTION** are used as part of this warning symbol to convey important safety messages and information relating to the installation and use of this product. These words, together with the safety warning symbol, mean:

 **DANGER:** Indicates a hazardous situation which, if not avoided, will result in death or serious injury!

 **WARNING:** Indicates a hazardous situation which, if not avoided, may result in death or serious injury!

 **CAUTION:** Indicates a hazardous situation which, if not avoided, may result in minor or moderate injury!

 **NOTE:** Important information, but not relating to a risk of death or injury (property damage only)!

**GENERAL INFORMATION**

 **WARNING:** Assembly and/or maintenance of this product requires advanced technical skill, appropriate tools, and a good understanding of tool usage and torque specifications. For your own safety, SW-MOTECH recommends having the assembly and/or maintenance carried out by a qualified and certified motorcycle workshop.

 **WARNING:** If you do choose to assemble this product yourself, carefully and fully read the mounting instructions before assembly and use, and follow all instructions to avoid serious injury or death. Also observe all relevant information in the vehicle manual when mounting or using the product. IF YOU DO NOT UNDERSTAND ANY PART OF THESE MOUNTING INSTRUCTIONS OR NEED AN EXPLANATION AS TO A SPECIFIC INSTRUCTION, DO NOT ATTEMPT TO INSTALL THIS PRODUCT WITHOUT CONSULTING SW-MOTECH FOR ASSISTANCE!

**PREPARATION:** Read the mounting instructions carefully and make sure that all parts on the parts list are available.

 **CAUTION:** Ensure that your vehicle is standing securely. Switch off the engine and remove the ignition key. Allow the engine/exhaust to cool down if necessary. Disconnect the battery when working on the electrical system. Only use proper tools and always wear safety goggles and gloves during assembly and maintenance. Have a second person help you with assembly and maintenance.

**ASSEMBLY:** All parts and connections removed from the vehicle must be reinstalled according to the vehicle manufacturer's specifications or replaced with parts and hardware supplied by SW-MOTECH.

 **WARNING:** Secure all threads with a medium-strength liquid threadlocker, unless otherwise specified.

 **DANGER:** Tightening torques not defined by SW-MOTECH must be obtained from the vehicle manufacturer or a certified motorbike workshop.

**FUNCTIONAL CHECK:** After mounting the product, ensure that no moving parts are obstructed and that the function of the vehicle is not impeded. Cables and hoses must not rub against each other and/or be hindered in any way.

 **WARNING:** Carry out a comprehensive functionality check before you start to drive. Check the tightening torque of all connections and the tight fit of the product after the first 50 km and then at regular intervals. Mounted accessories can change the handling and stability of the vehicle.



**SW-MOTECH GmbH & Co. KG**  
Ernteweg 7-10  
35282 Rauschenberg  
Germany



 [info@sw-motech.com](mailto:info@sw-motech.com)  
 [www.sw-motech.com](http://www.sw-motech.com)



Take note of the symbols and what they mean in the ASSEMBLY section. If the term OEM appears in the ASSEMBLY section, the vehicle manufacturer's specifications must be observed and applied.



If you have any questions, please don't hesitate to contact our Customer Service team or our distributors. You can find our telephone number and a list of our distributors in our online shop:

**[www.sw-motech.com](http://www.sw-motech.com)**



**Use thread locker:** Indicates that a thread must be coated with liquid thread locker. H (HIGH): high strength; M (MEDIUM): medium strength; L (LOW): low strength.



**Tighten/note the tightening torque information:**

Indicates the tightening torque of a part specified by SW-MOTECH or the vehicle manufacturer (OEM).




**Do not use thread lock:** Indicates that no liquid thread lock should be used at this point.

# PARTS LIST • READ AND KEEP MOUNTING INSTRUCTIONS!

|                                                                                                                                                                                                                                                                          |                                                                                                                                                                                                                                                              |                                                                                                                                                                                                                                                            |                                                                                                                                                                                                                                                                |                                                                                                                                                                                                                                                          |                                                                                                                                                                                                                                   |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <div>2</div> <div>1</div>  <div>KFT.06.799.001.11</div> <div> 2/2</div>                                | <div>2</div>  <div>M8 x 70; DIN 7991<br/>SC.ST.08.070.01.7991.088</div> <div> 4/4</div>    | <div>4</div>  <div>Ø 22 / Ø 8,4 / h 40<br/>DB.ST.0220.0084.0400.02</div> <div> 4/4</div> | <div>5</div>  <div>Ø 20 / Ø 8,4 / h 5<br/>DB.ST.0200.0084.0050.02</div> <div> 4/4</div>      | <div>6</div>  <div>KFT.06.799.002R.11</div> <div> 1/1</div>                        | <div>7</div>  <div>KFT.06.799.002L.11</div> <div> 1/1</div> |
| <div>8</div>  <div>M8 x 45; DIN 912<br/>SC.ST.08.045.01.912.088</div> <div> 4/4</div>                  | <div>9</div>  <div>Ø 8,4; DIN 125<br/>US.ST.084.01.125</div> <div> 4/4</div>               |                                                                                                                                                                                                                                                            |                                                                                                                                                                                                                                                                |                                                                                                                                                                                                                                                          |                                                                                                                                                                                                                                   |
| <div>3</div> <div>3</div>  <div>M8 x 65; DIN 7991<br/>SC.ST.08.065.01.7991.088</div> <div> 4/4</div> |                                                                                                                                                                                                                                                              |                                                                                                                                                                                                                                                            |                                                                                                                                                                                                                                                                |                                                                                                                                                                                                                                                          |                                                                                                                                                                                                                                   |
| <div>4</div> <div>10</div>  <div>KFT.22.892.004.11</div> <div> 1/1</div>                           | <div>11</div>  <div>M6 x 45; DIN 912<br/>SC.ST.06.045.01.912.088</div> <div> 2/2</div> | <div>12</div>  <div>Ø 6,4; DIN 9021<br/>US.ST.064.01.9021</div> <div> 2/2</div>      | <div>13</div>  <div>Ø 18 / Ø 6,2 / h 25,5<br/>DB.00.180.062.255.01</div> <div> 2/2</div> | <div>14</div>  <div>M6; DIN 6927<br/>MU.ST.06.02.6927.08</div> <div> 2/2</div> |                                                                                                                                                                                                                                   |
| <div>5</div> <div>15</div>  <div>KFT.06.799.972.02.11</div> <div> 1/1</div>                        | <div>16</div>  <div>KFT.06.799.971.01.11</div> <div> 1/1</div>                         | <div>17</div>  <div>KFT.00.152.SV.8</div> <div> 1/1</div>                            |                                                                                                                                                                                                                                                                |                                                                                                                                                                                                                                                          |                                                                                                                                                                                                                                   |

1

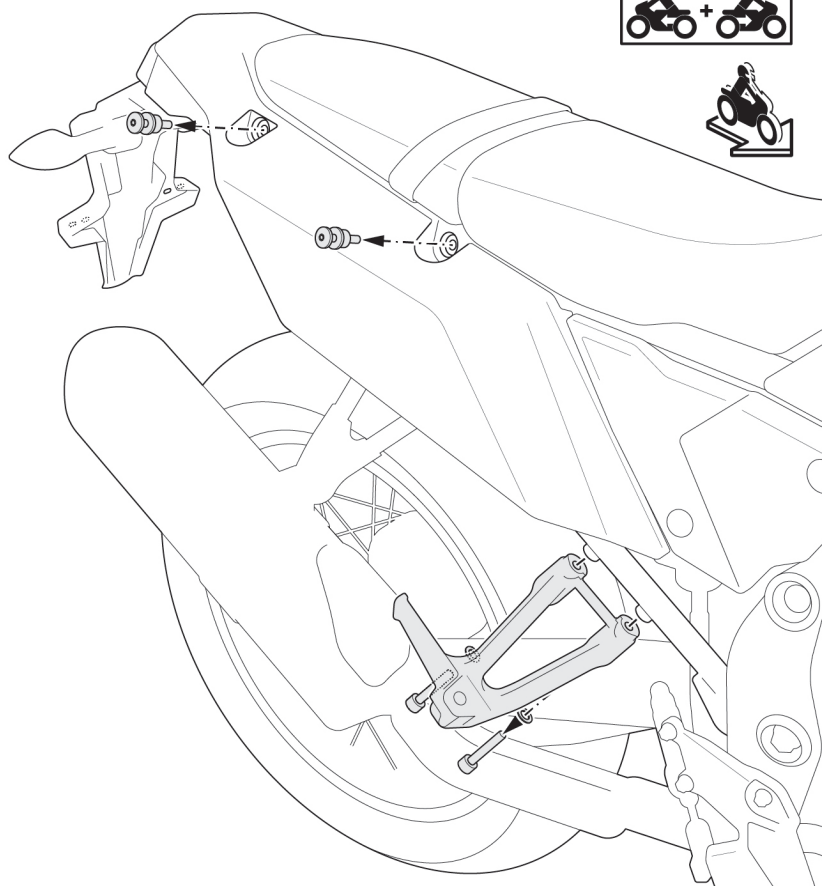

⚠ **WARNING:** Always wear eye and hand protection.



⚠ **WARNING:** Always use suitable tools.

⚠ **NOTE:** The installation is shown on the right side. Repeat the installation with the corresponding parts on the left side of the vehicle in the same way as on the right side.

Remove the passenger footrest holders and luggage hooks from **both sides** of the vehicle.



2

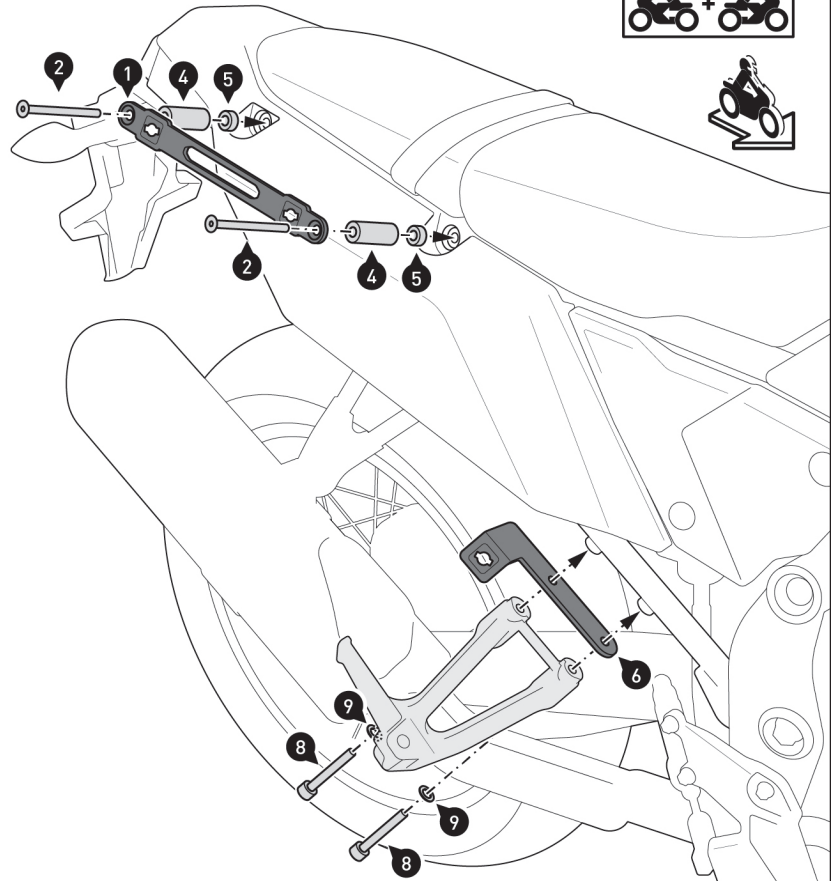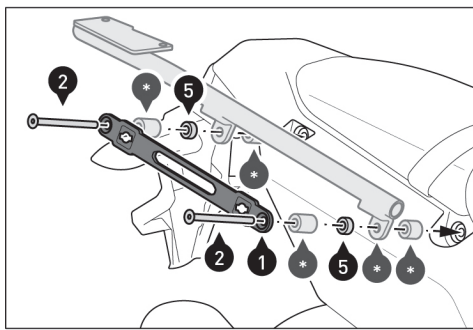

**⚠ NOTE:** Steps [2] to [3] are not in assembly order. They simply illustrate specific installation situations.





**⚠ NOTE:** The detailed drawing shows the installation of the side carrier with the SW-MOTECH rack. Use the mounting parts included with the rack (·) in combination with the mounting parts shown for the side carrier.

#### YAMAHA XT700Z (2025 –)



Screw tabs (1) and (6/7) onto the vehicle **on both sides**.

**⚠ WARNING:** Use liquid threadlocker.

Do not tighten screws (2) and (8) yet.

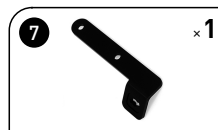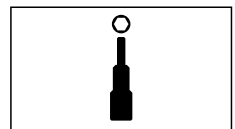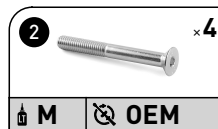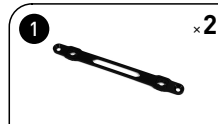

3

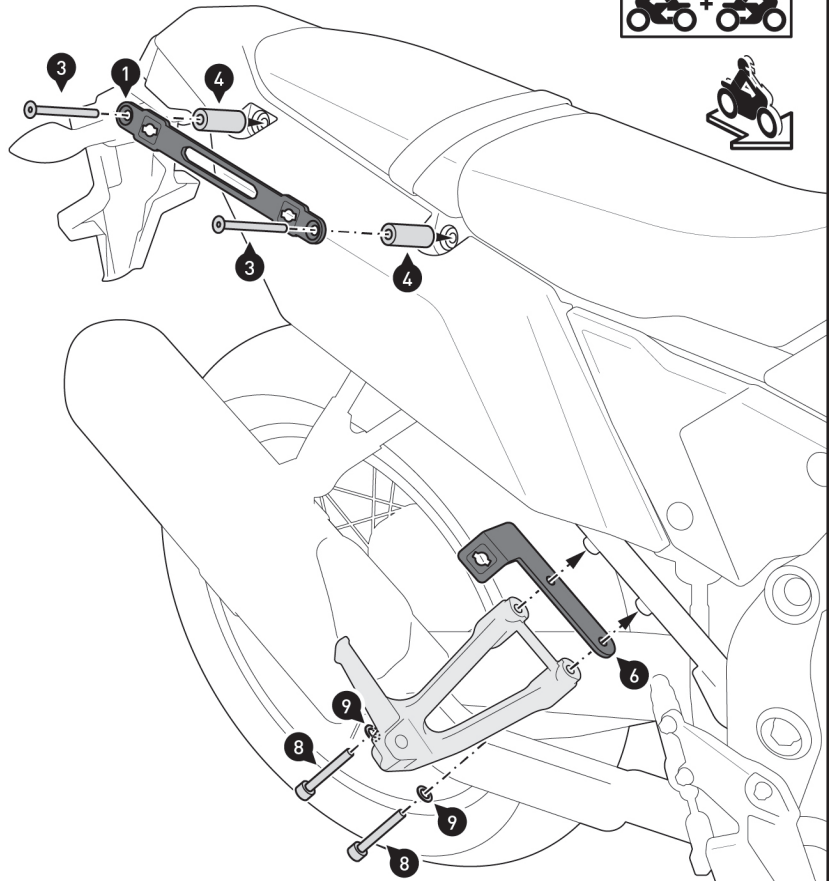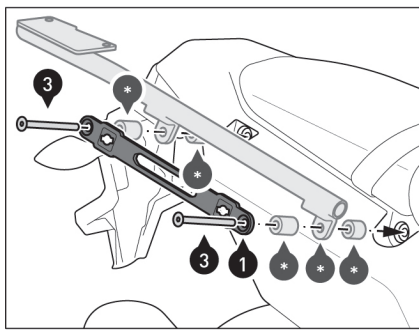

**⚠ NOTE:** Steps [2] to [3] are not in assembly order. They simply illustrate specific installation situations.



**⚠ NOTE:** The detailed drawing shows the installation of the side carrier with the SW-MOTECH rack. Use the mounting parts included with the rack (·) in combination with the mounting parts shown for the side carrier.


**YAMAHA XT700Z (– 2024)**

Screw tabs (1) and (6/7) onto the vehicle **on both sides**.

**⚠ WARNING:** Use liquid threadlocker.




Do not tighten screws (3) and (8) yet.

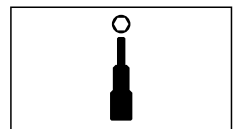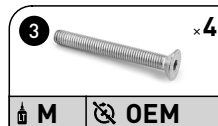


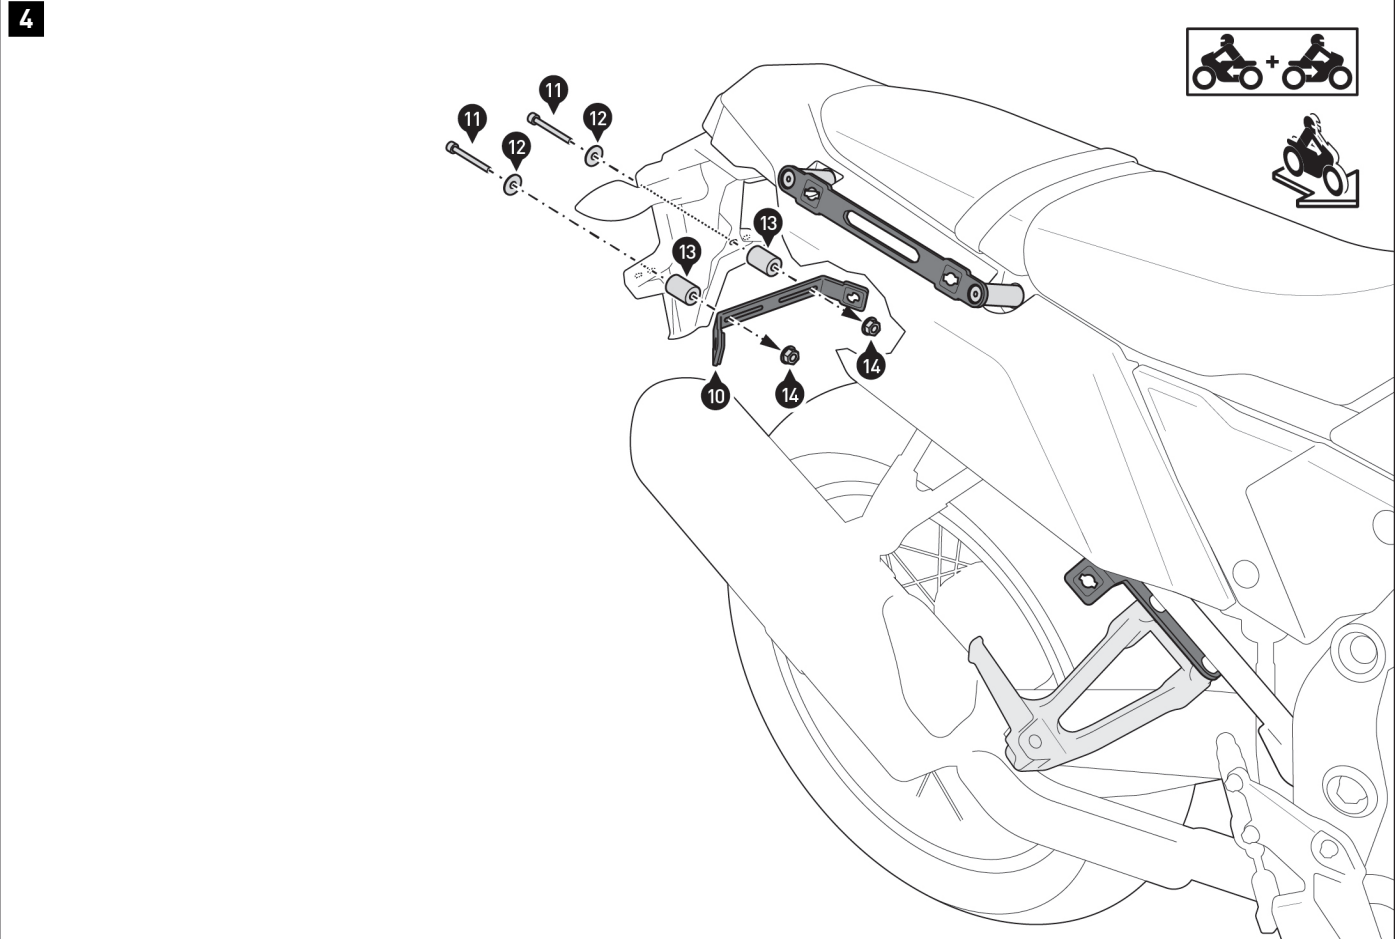


**⚠ NOTE:** Skip this step if the original accessory license plate holder is installed. Install crossbar (10) with quick-release fasteners (17) between side carriers (15/16), as shown in step [5]. Parts (11) to (14) are not required.

Screw crossbar (10) to the **inner** license plate holes of the fender. Do not tighten the screws (11) yet.

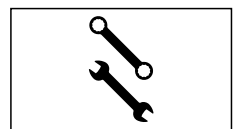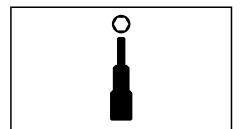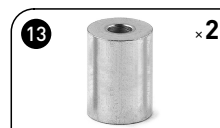







5

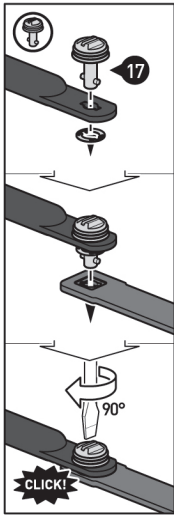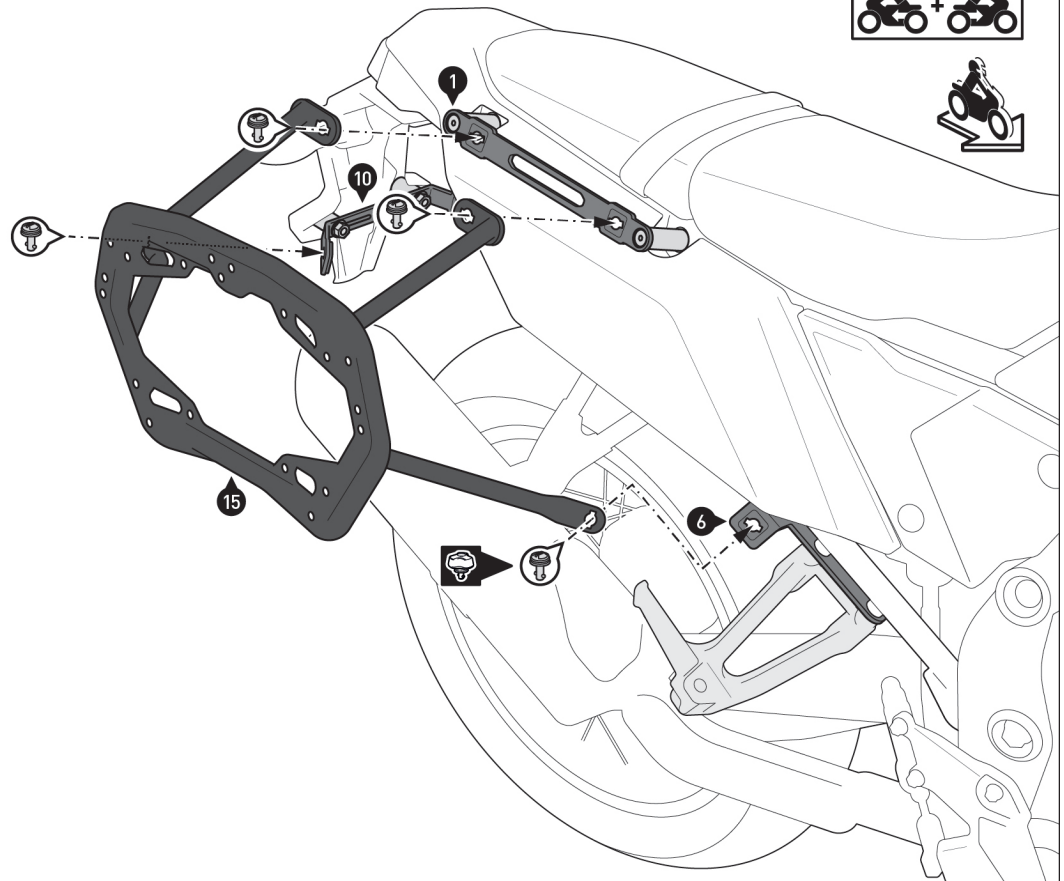

**⚠ NOTE:** The SW-MOTECH anti-theft protection devices are available separately; mount the anti-theft protection devices on both sides at the indicated position.

Using quick-release fasteners (15/16), connect side carriers (17) to tabs (1) and (6/7) and crossbar (10).  
Secure the quick release fasteners (17) using the lock washers.

When all components are seated without tension, tighten screws (2), (3) and (8) **on both sides** according to the vehicle manufacturer's specifications.  
Tighten the screws (11) as specified in the mounting instructions.

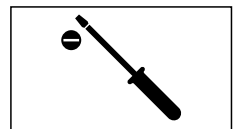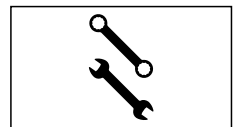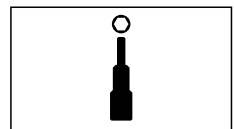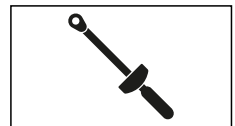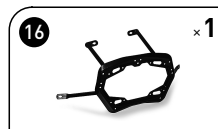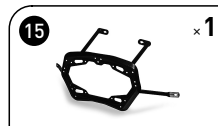



PRODUCT-SPECIFIC NOTES

**⚠ DANGER:** The specified maximum load includes the weight of the suitcase/luggage and adapter kit. The maximum load of the vehicle specified by the vehicle manufacturer applies.

 ≤ 12.5KG (≤ 27.5 lbs)  ≤ 130 km/h (≤ 80 mph)

**⚠ NOTE:** The side carriers were designed exclusively for use with SW-MOTECH adapter kits.

**⚠ NOTE:** Remove the side carriers when riding without luggage. Always use the side carriers in pairs.

**⚠ WARNING:** Make sure that the cases are NOT in the exhaust gas stream after mounting them on the vehicle. Risk of burns!

**⚠ NOTE:** Observe all country-specific regulations for the registration and operation of your vehicle as well as any applicable TÜV regulations. Have any parts requiring registration entered into your vehicle documents by your local inspection authority after they have been installed.